

FIG.2

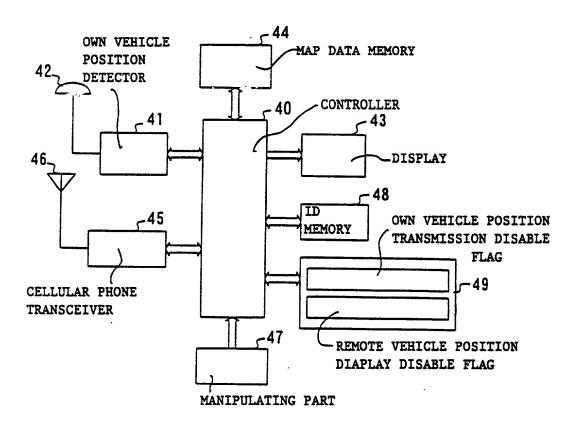


FIG.3

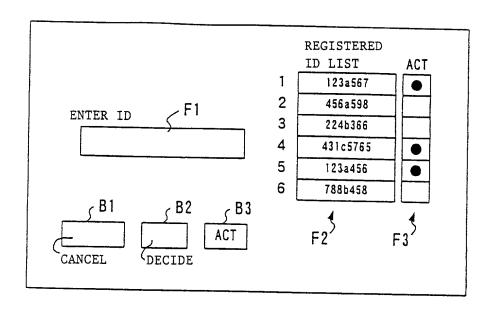


FIG.4

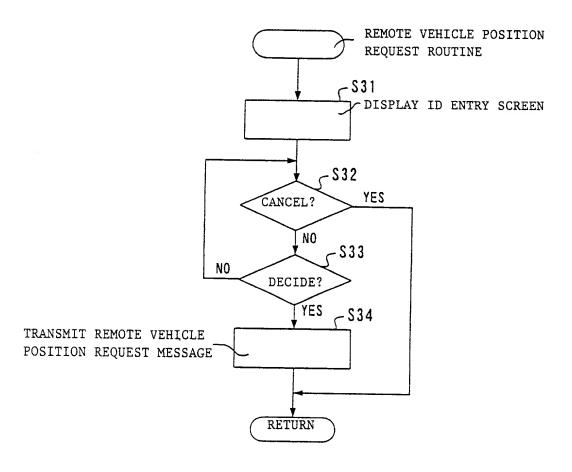


FIG.5

REMOTE VEHICLE POSITION REQUEST MESSAGE

OPR	REQUESTING	REQUESTED
	VEHICLE ID	VEHICLE ID

OPR: REMOTE VEHICLE POSITION REQUEST CODE

FIG.6

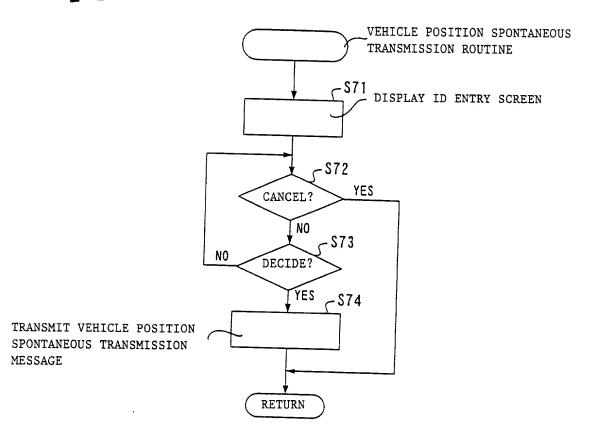


FIG.7


VEHICLE POSITION SPONTANEOUS TRANSMISSION MESSAGE

CPT ORIGINATING DESTINATION VEHICLE POSITION VEHICLE ID VEHICLE ID INFORMATION

CPT: VEHICLE POSITION SPONTANEOUS TRANSMISSION CODE

EIG. 8

MESSAGE FORWARD ROUTINE

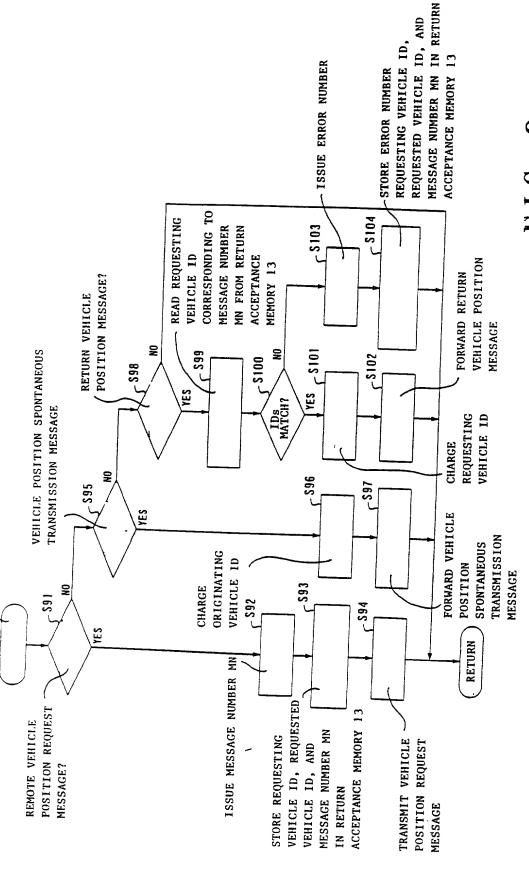

VEHICLE POSITION REQUEST MESSAGE

MESSAGE NUMBER	
REQUESTED	VIHICLE ID
REQUESTING	VEHICLE ID
Cpp	<u> </u>

CPR: vehicle position request code


FIG. 10

RETURN VEHICLE POSITION MESSAGE

VEHICLE POSITION	INFORMATION	
MESSAGE	NUMBER MN	
REQUESTED	VEHICLE ID	
REQUESTING	VEHICLE ID	
RCP		

RCP: RETURN VEHICLE POSITION CODE

FIG. 11

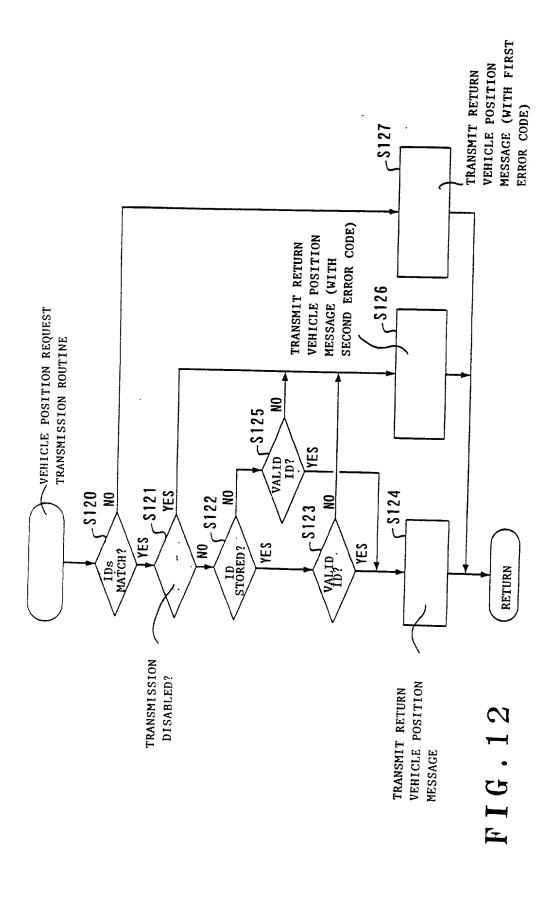

RETURN VEHICLE POSITION MESSAGE

RCP REQUESTING REQUESTED MESSAGE NUMBER MN

ERR1

RCP: RETURN VEHICLE POSITION CODE

ERR1; FIRST ERROR CODE

FIG. 13

RETURN VEHICLE
POSITION MESSAGE


RCP REQUESTING REQUESTED MESSAGE NUMBER MN VEHICLE ID VEHICLE ID

ERR2

RCP: RETURN VEHICLE POSITION CODE

ERR2: SECOND ERROR CODE

FIG. 14

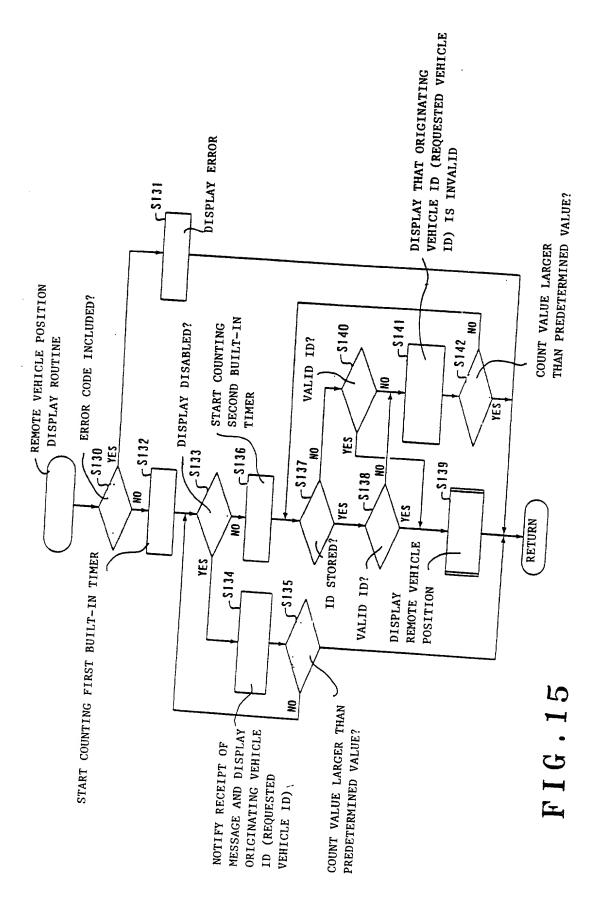

(REMOTE VEHICLE POSITION DISPLAY MODE)

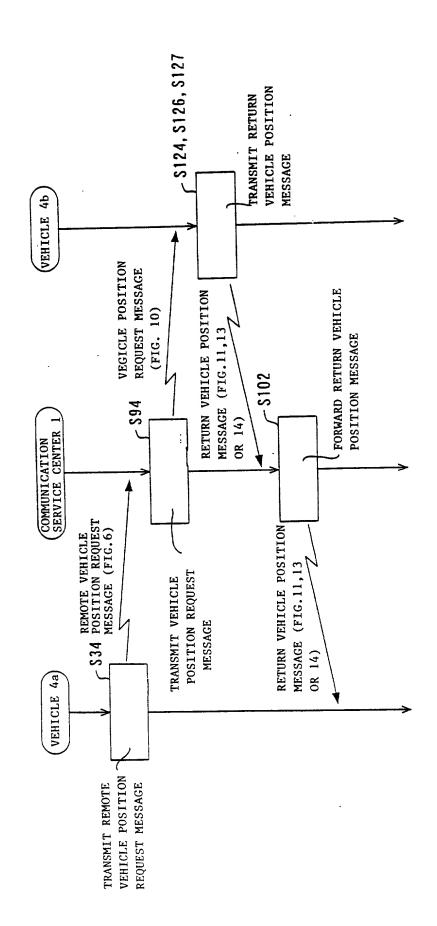


FIG. 16

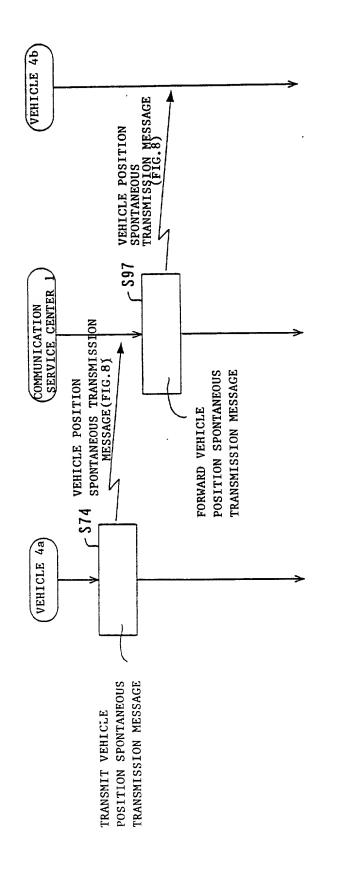


FIG. 17